



## Analog coupler

Startup instruction




---


## System requirements:

- Base from Version 1.44
- Saveris PC software from Version 4.0 Service pack 5

## Current supply of the transmitter via the analog coupler (24V/150mA)

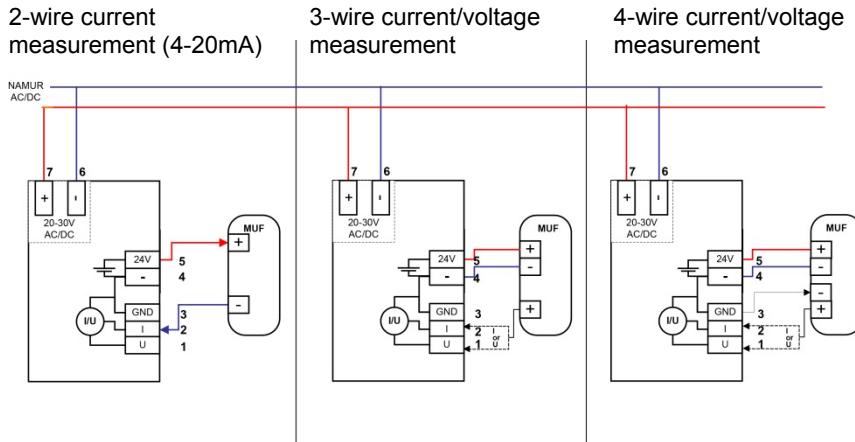

## Separate current supply of the transmitter

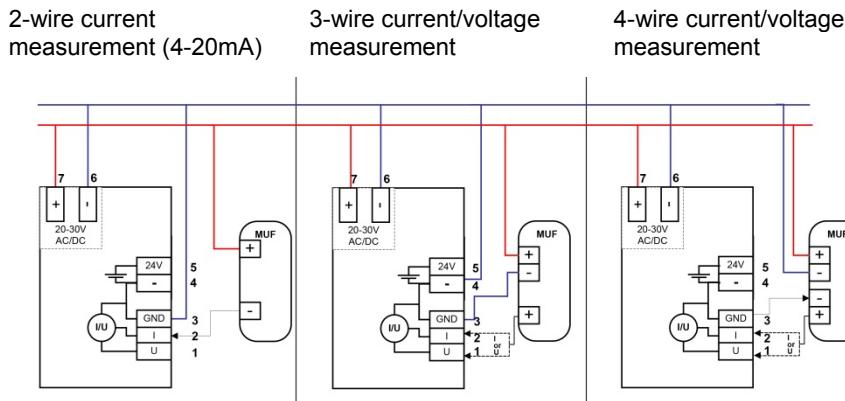



0970 0464 en 02